


Removing

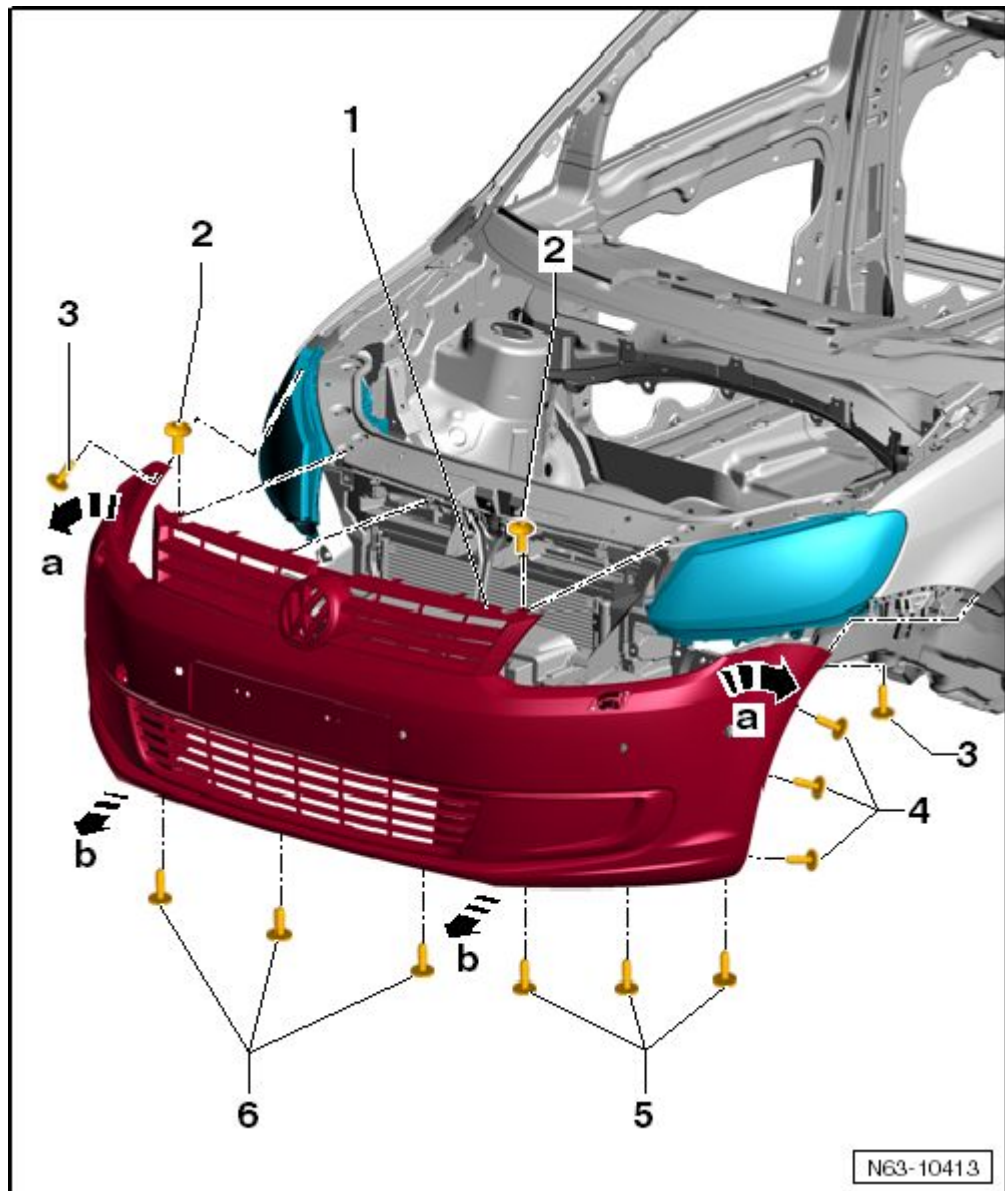

- Remove bolts -2-.
- Remove bolts -3- (pointing upwards) on left and right of wheel housing.
- Unscrew bolts -4- from wheel housing.
- Remove bolts -5- and -6- from below.

Further dismantling requires the help of a second mechanic.

- Pull front bumper cover -1- out of fasteners of guides on left and right of wing -arrows a-.
- With the aid of a second mechanic, pull off front bumper cover -1- parallel -arrows b- from vehicle.
- Remove connectors of all installed electrical components.

Notes and work sequence for Park Assist (if fitted) are located in →[Electrical system; Rep. gr.94](#)

- Disconnect washer fluid hose connectors (if there are any) →[Electrical system; Rep. gr.92](#)