

Removing and installing cover for fresh air intake, LHD vehicles

Removing

- Remove right plenum chamber cover → General body repairs, exterior; Rep. gr.50; Bulkhead; Removing and installing plenum chamber cover.
- For vehicles with heated windscreen, detach wiring from cover for fresh air intake -1-.
- Unhook cover for fresh air intake -1- in - direction of arrow B- and pull it out in - direction of arrow A-.



Note

- ♦ Water may ingress into the fresh air intake if the cover for fresh air intake is damaged or not properly fitted. This may result in complaints about odours from the heater and air conditioning system and/or about moisture in the vehicle.
- ♦ Water may flow via the cover for fresh air intake into the fresh air intake if the plenum chamber cover is damaged or not properly fitted.

Installing

Install in reverse order.

